

電動氣彈槍



FULL SEMIAUTO

CM.123


請仔細閱讀說明書




在操作之前必需读熟这些说明书
Always read through this manual before operation.

 警告 WARNING	
	<p>18岁以上年龄才能使用 Only for 18 years of age or older</p> <p>18岁以上年龄才能利用这支汽枪比赛使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.</p>
	<p>注意受损伤 Injury caution</p> <p>因为BB 弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。 Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.</p>
	<p>注意熟读警告指示手册 Careful reading of Handling cautions and instruction manual</p> <p>在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示 Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.</p>

FOR AGES:18 AND UP

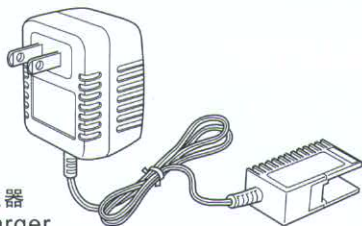


充电器
Charger

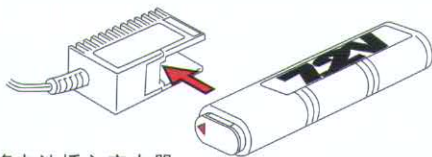


将电池插入充电器
Insert the battery into the jack


1.各部分名称 NAME OF EACH PART

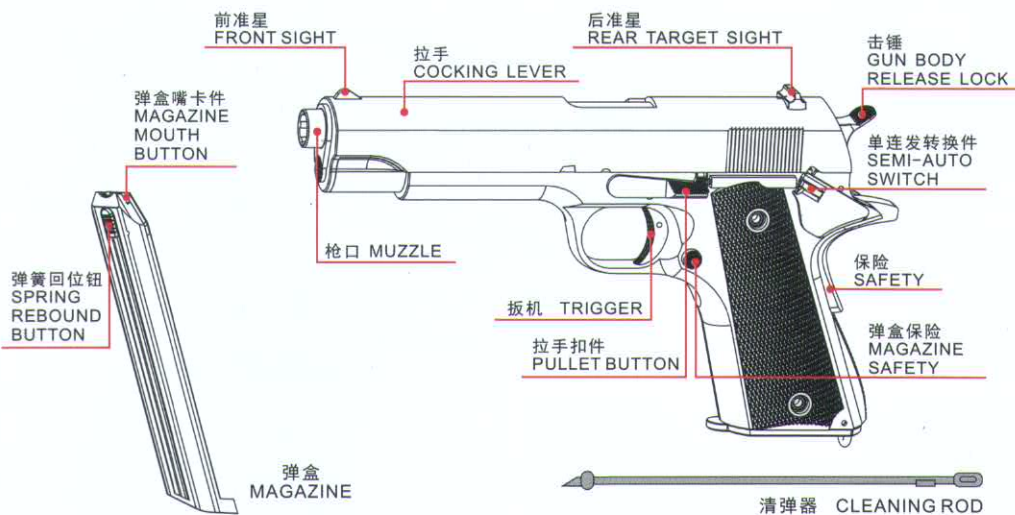

2.保险销 SAFETY

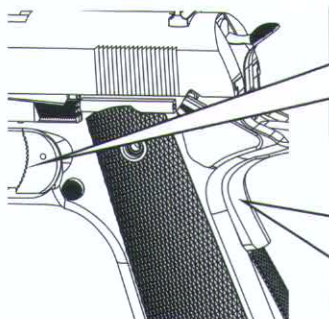

- USE THE FIRST FINGER TO PULL THE TRIGGER
用食指扳动扳机
- NEVER PUT THE FINGER ON THE TRIGGER BEFORE SHOOTING
射击前切勿将手指放在扳机上。

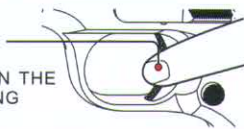


- KEEP THE SAFETY AT "SAFE POSITION" WHEN THE GUN IS UNUSED.




3. 充电池 ACCUMULATOR

- ① Press the puller button to unload down the puller.
用手指按下拉手扣件卸下拉手。

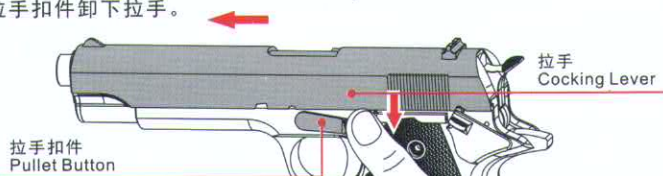

- ② Install the battery in the battery case.
将电池装入电池座。

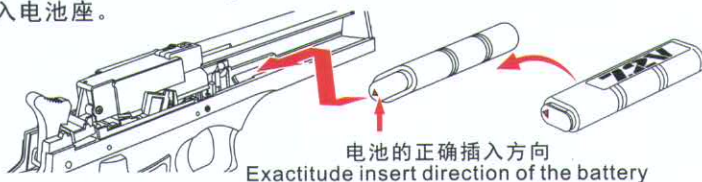


- ③ Then cover the gun body.
再将拉手盖上。



4. 单发\连发 SINGLE\RUNNING SHOOT



Never put finger on the trigger when adjust the button
调节按钮时请勿将手指放在扳机上

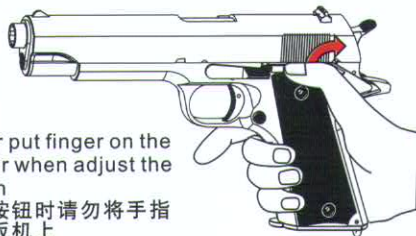

Single shoot position < ● >
单发位置



Single shoot: The button point upward, one bullet shoot out one time.
单发: 将按钮拨向单发位置, 射击时每次只发一弹。

Running shoot position < ● ● >
连发位置



A running shoot: The button point downward, more bullets shoot out one time.
连发: 将按钮拨向连发位置, 射击时可连续发射多弹。


5. 安装\拆卸弹仓

INSTALL DISASSEMBLE THE MAGAZINE


- 1 Press the magazine release button to release the magazine.
按住弹仓拆卸钮拆卸弹仓。




- 2 Load 6mm BB bullets into the magazine.
装入6mm BB弹。

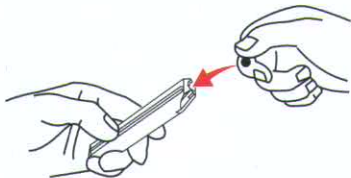


- 3 Adjust the parabola regulate button to adjust the direction of the parabola.
通过调节抛物线调节钮调节抛物线的方向。

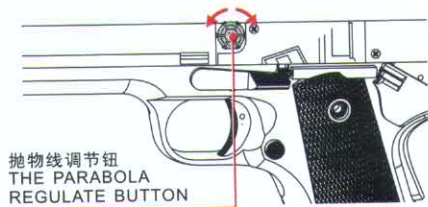

- 3 Push the magazine into the gun till a click sound heard.
将弹仓推入枪身直至听到“咔嚓”一声。


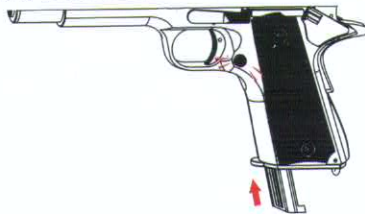


- The best position is where the bullets fly horizontally, and the longest range is obtained.
保持水平方向的射击能够使BB弹获得最远射程。

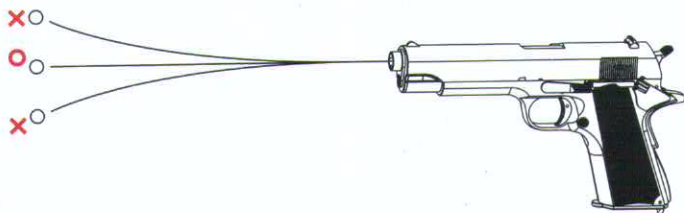


CAUTION **WARNING**
△ 注意 △ 警告

- Our company will not be responsible for trouble caused by using the bullet produced by other company.
我公司不对使用其它公司BB弹产品而引起的事故负责。
- The bungsome bb bullet is damage with the gun. Please use the precision bb bullet of our company.
拙劣的BB弹会对枪支造成严重损害，请使用我公司的标准BB弹系列产品。

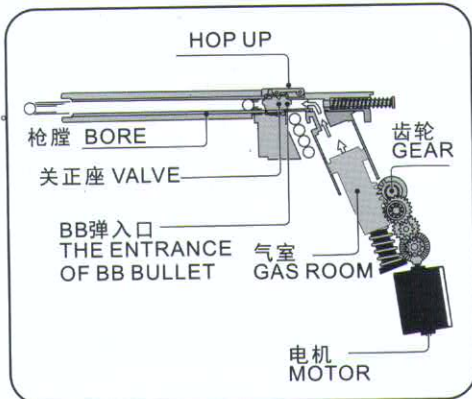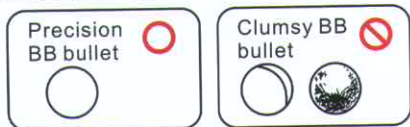

6. 射击 SHOT

- 1 Set semi-auto switch in semi or auto position.
将单连发转换件拨在单发或连发位置。

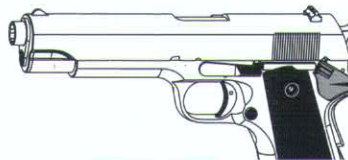


SINGLE SHOT
单发射击




RUNNING SHOT
连发射击



- 2 Push the safety to the top.
将安全销握住至底部。

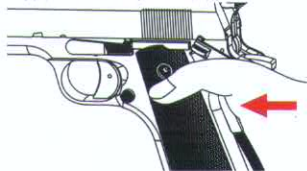


- 3 Pull the trigger to shot.
扣动扳机射击。

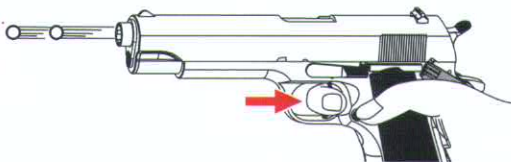


7. 清除阻塞BB弹 REMOVE CLOGGED BULLETS

1. 清通枪膛 CLEAN THE BORE

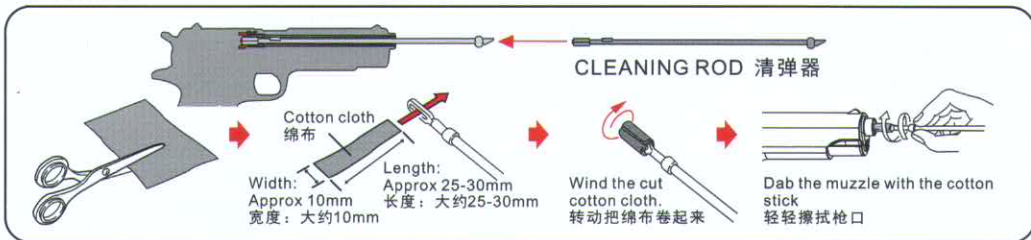

2. 清除阻塞BB弹 REMOVE CLOGGED BULLETS

- 2 Will cleaning rod to insert a gun tube.
将清弹器插入枪管。

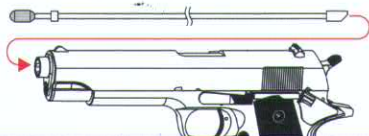


- 3 Remove the clogged bullets.
清除阻塞的BB弹。




3. 电机的微调 ELECTRICAL ENGINEERING OF TINY ADJUST

ONLY WHEN THE MOTOR NOISE BECOMES HIGH AFTER OPERATIONS FOR A LONG PERIOD OF TIME, CONDUCT THE FINE ADJUSTMENT AS SHOWN.
若使用时间过长, 电机发出很大的噪音时, 请按如图所示对电机进行微调。

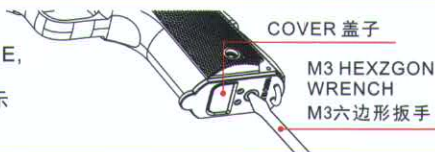

● THE COMPOSITION OF CM.123

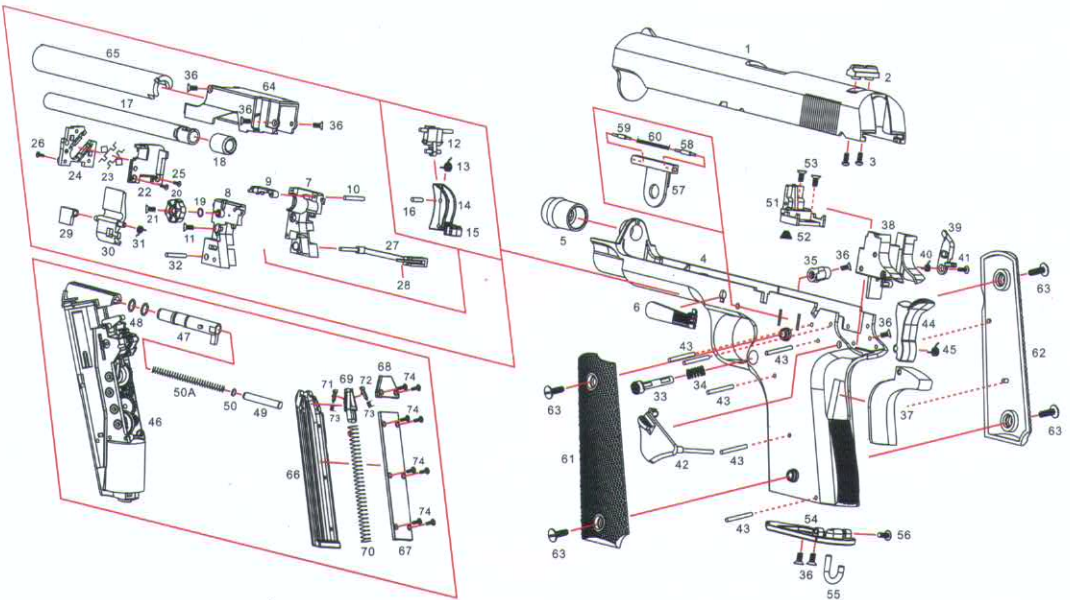

- | | | | |
|---|--------------------------------------|---|---|
| 1. Puller | 1. 拉手 | 39. Safety driver | 39. 保險傳動件 |
| 2. Rear sight | 2. 後準星 | 40. Safety spring | 40. 保險扭簧 |
| 3. $\varnothing 2.3 \times 5$ PWAHO | 3. $\varnothing 2.3 \times 5$ PWAHO | 41. $M2 \times 4$ PWMHO D=5.5 | 41. $M2 \times 4$ PWMHO D=5.5 |
| 4. Gun body | 4. 主體 | 42. Single shot swith | 42. 單連發轉換件 |
| 5. Gun tip | 5. 槍頭 | 43. $\varnothing 2 \times 29$ shaft | 43. $\varnothing 2 \times 29$ 單花鐵軸 |
| 6. Puller button | 6. 拉手扣件 | 44. Gun body release button | 44. 擊錘 |
| 7. Right hop-up base | 7. 右過祇座 | 45. Spring | 45. 擊錘扭簧 |
| 8. Left hop-up base | 8. 左過祇座 | 46. Gear box | 46. 保箱 |
| 9. Hop-up adjust | 9. 過祇調節片 | 47. Loading sets | 47. 上膛套 |
| 10. $\varnothing 1.5 \times 12.5$ shaft | 10. $\varnothing 1.5 \times 12.5$ 花軸 | 48. O type ring | 48. 膛套“O”型圈 |
| 11. $M3 \times 12$ KMHO | 11. $M3 \times 12$ KMHO | 49. Chamber cover guide nail | 49. 膛套導釘 |
| 12. Sliding handle driver | 12. 拉杆傳動件 | 50. Chamber cover guide nail O-rings | 50. 膛套導釘“O”型圈 |
| 13. Trigger torsional spring | 13. 扳機扭簧 | 50A. Cocking return springs | 50A. 上膛回位簧 |
| 14. Trigger | 14. 扳機 | 51. Loading rear base | 51. 膛後座 |
| 15. Trigger backseat | 15. 扳機後座 | 52. Spring | 52. 塔形壓簧 |
| 16. $\varnothing 2 \times 7$ shaft | 16. $\varnothing 2 \times 7$ 單花鐵軸 | 53. $M3 \times 8$ KMHO | 53. $M3 \times 8$ KMHO |
| 17. Inner barral | 17. 槍內管 | 54. Magazine base | 54. 彈匣底座 |
| 18. Hop-up rubber | 18. 過祇橡膠 | 55. Magazine base decorating parts | 55. 彈匣底座裝飾件 |
| 19. Hop-up “O” type rubber | 19. HOP-UP調節“O”型圈 | 56. $M2.5 \times 7$ PMHO | 56. $M2.5 \times 7$ PMHO |
| 20. Hop-up adjust button | 20. HOP-UP調節鈕 | 57. Single-running iron axle base | 57. 單連發鐵軸固定座 |
| 21. $M2 \times 5$ KMHO | 21. $M2 \times 5$ KMHO | 58. Single-running shot stepper axle 1 | 58. 單連發發階軸1 |
| 22. Battery base | 22. 電池底座 | 59. Single-running shot stepper axle 2 | 59. 單連發發階軸2 |
| 23. Battery base copper slice | 23. 電池座銅片 | 60. Semi/auto spring | 60. 單連發壓簧 |
| 24. Battery cover | 24. 電池座蓋 | 61. Left grip cover | 61. 左貼片 |
| 25. $\varnothing 2 \times 5$ KBHO | 25. $\varnothing 2 \times 5$ KBHO | 62. Right grip cover | 62. 右貼片 |
| 26. $M2 \times 8$ KMHO | 26. $M2 \times 8$ KMHO | 63. $\varnothing 4 \times 6$ CBHO \odot | 63. $\varnothing 4 \times 6$ CBHO \odot |
| 27. Driving lever | 27. 拉杆 | 64. Hop-up cover | 64. 過祇罩 |
| 28. Clutch | 28. 離合器 | 65. Barral cover | 65. 槍管蓋 |
| 29. Unload battery button | 29. 電池卸座扣件 | 66. Magazine main body | 66. 彈匣主體 |
| 30. Battery remove base | 30. 電池卸座件 | 67. Magazine cover | 67. 彈盒蓋 |
| 31. Battery remove base spring | 31. 電池卸件扭簧 | 68. Magazine mouth cover | 68. 彈盒嘴蓋 |
| 32. $\varnothing 3 \times 29$ shaft | 32. $\varnothing 3 \times 29$ 鐵軸 | 69. Bullet loading tip | 69. 升彈頭 |
| 33. Magazine press | 33. 彈匣扣件 | 70. Spring | 70. 壓簧 |
| 34. Magazine withhold spring | 34. 彈匣扣壓簧 | 71. Left block | 71. 左嘴卡件 |
| 35. Magazine fastener | 35. 彈匣扣件 | 72. Right block | 72. 右嘴卡件 |
| 36. $M2 \times 6$ KMHO | 36. $M2 \times 6$ KMHO | 73. Spring | 73. 壓簧 |
| 37. Safety accessories | 37. 保險配件 | 74. $M2 \times 5$ KMHO | 74. $M2 \times 5$ KMHO |
| 38. Chamber base | 38. 膛後底座 | | |